


DIAGRAM OF WK-1

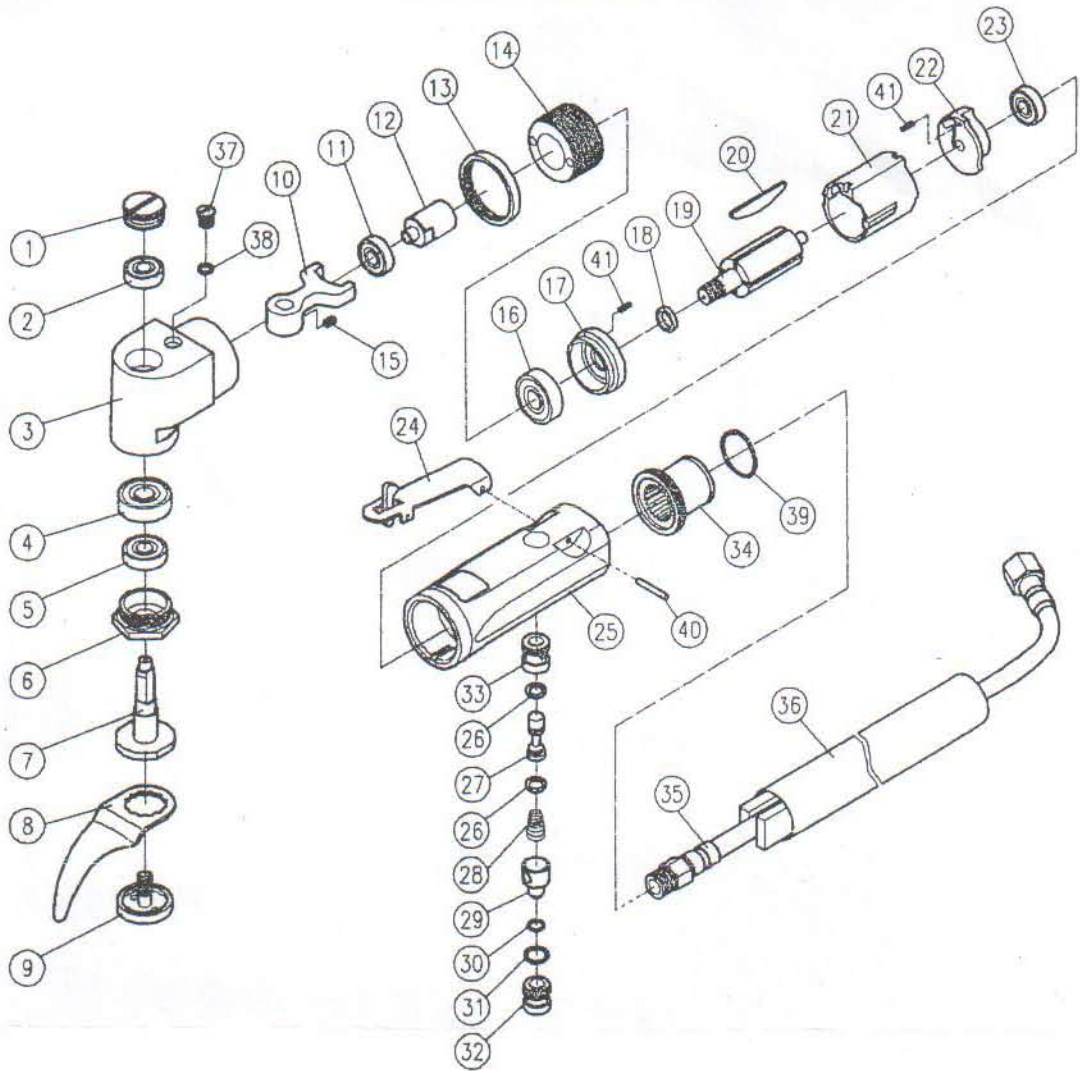

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	351-0482	PLUG	19	351-0500	ROTOR	37	351-0518	OIL COVER
2	351-0483	626 BALL BEARING	20	351-0501	ROTOR BLADE	38	351-0519	O-RING
3	351-0484	HEAD	21	351-0502	CYLINDER	39	351-0520	CIRCLIP
4	351-0485	6000 BALL BEARING	22	351-0503	END PLATE	40	351-0521	THROTTLE LEVER PIN
5	351-0486	SEAL-OIL	23	351-0504	626 BALL BEARING	41	351-0522	ROLL PIN
6	351-0488	NUT CLAMP	24	351-0505	THROTTLE LEVER			
7	351-0488	SPINDLE DRIVE	25	351-0506	HOUSING			
8	351-0489	BLADE 57mm (2-1/4")	26	351-0507	O-RING			
9	351-0490	SCREW RETAINER	27	351-0508	VALVE STEM			
10	351-0491	FOFK DRIVE	28	351-0509	VALVE SPRING			
11	351-0492	607 BALL BEARING	29	351-0510	AIR REGULATOR			
12	351-0493	SHAKE CRANK	30	351-0511	O-RING			
13	351-0494	NUT	31	351-0512	O-RING			
14	351-0495	RETAINER	32	351-0513	THROTTLE VALVE PLUG			
15	351-0496	SET SCREW	33	351-0514	THROTTLE VALVE BUSHING			
16	351-0497	6000 BALL BEARING	34	351-0515	EXHAUST DEFLECTOR			
17	351-0498	FRONT PLATE	35	351-0516	AIR INLET HOSE			
18	351-0499	BEARING SPACE	36	351-0517	EXHAUST HOSE			